

CLEAR® QUICK START GUIDE



SET IT UP


Step 1:

- Power on your CLEAR Spot® Voyager by pressing and holding the power button (button on the left side “PWR”) until you see 4G LED lights come on. Note: Your CLEAR Spot Voyager is partially charged. We recommend that you fully charge your CLEAR Spot Voyager prior to using the device.

Step 2:

- When the 4G LED lights stop flashing, your CLEAR Spot® Voyager is ready to connect any wi-fi-enabled device. Connect your Spot to your PC or Mac® device using the Wi-Fi Network Name (SSID) and Wi-Fi Default Password located on the back of your Spot.
- On your computer, open the Wireless Network Connection located at the bottom right-hand corner of your computer screen. Select the Wi-Fi network name of your device and enter the Wi-Fi password when prompted.

Wi-Fi Network Name (SSID)

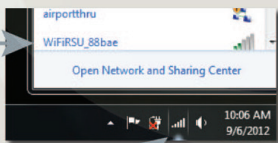

Wi-Fi Network Connection



Power **Wi-Fi LED Lights** **4G LED Lights**
Power LED Lights

Step 3:

- Open your browser and go to any website, where you will be re-directed to the CLEAR website. Follow the online instructions to quickly complete your account set-up step. That's it! Get online anywhere within CLEAR® coverage.

Limited Edition CLEAR[®] SPOT[®] VOYAGER

QUICK TIPS

To extend battery life, limit the number of wi-fi users or reduce your wi-fi range when possible.

If your browser is stuck on a message from CLEAR[®], follow the on-screen instructions to view your message and provide any requested information.

You can manage your CLEAR Spot Voyager any time you are connected by typing <http://clearspot> or 192.168.11 in your browser address bar. Your default password is “admin”.

HOW TO RESET YOUR DEVICE:

- Turn on the device by pressing and holding the power button for 3-4 seconds.
- Release the power button when 4G LED lights turn red.
- Once device is powered on, press the power button for 10 seconds.
- Release the power button when the 4G LED lights blink yellow.
The device will turn off.
- Power on the device again. The device will start up with factory default settings.

CUSTOMER SUPPORT AND INFORMATION

- For more detailed product information, go to the online User Guide, FAQs, Live Chat Support at clear.com/support, or [facebook.com/clear4g](https://www.facebook.com/clear4g).
- If you still have questions, call us at **1-888-888-3113** for live support.
- Para la asistencia en español por favor llame al **1-888-888-3113** y seleccionar español.
- Please read the separate **Important Information** document located under “Help” on your CLEAR[®] Spot homepage for regulatory information, safety information, and other important disclosures.